

- b) remove covers and extract the battery;
- c) thoroughly wipe casing, covers and together with the power supply compartment using cloth soaked in the prepared detergent solution.
- d) wipe the decontaminated surfaces with dry and clean cloth.
- e) assemble the instrument.

9. TROUBLESHOOTING

Probable troubles, their causes and remedies are shown in T.5.
Table 5

Character (outward manifestation) of trouble, its additional signs	Probable cause	Remedy
1. The instrument is switched on. There are no readings (or they are displayed for short time and disappear) on the indicator.	1.1. "Korund" battery is fully discharged.	1.1. Replace the battery.
2. During measurement in natural radiation background conditions the indicator panel displays "-".	2.1. Selfdischarge of gas-discharge counters CBM 20.	2.1. Replace in turn one or two counters.
3. In "STAND BY" mode in case of an excess of the preset threshold value the instrument does not respond with sound signal.	3.1. Faulty bell.	3.1. Replace the bell.
4. In digital information on the indicator panel some figure elements are absent.	4.1. Failure of the liquid crystal indicator. 4.2. Failure of the pulse counter.	4.1. Replace the indicator. 4.2. Replace faulty micro-circuit.